Unity Physics Training

Coordinate system


第2版:2021/7/14

E006482/1.0




Objectives

Unityの様々な座標系を理解する

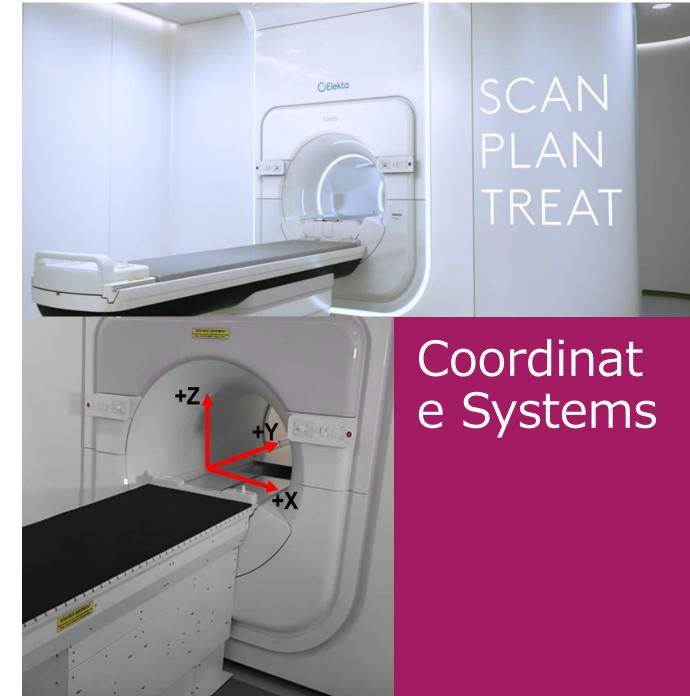

座標系の概要

Unity座標系

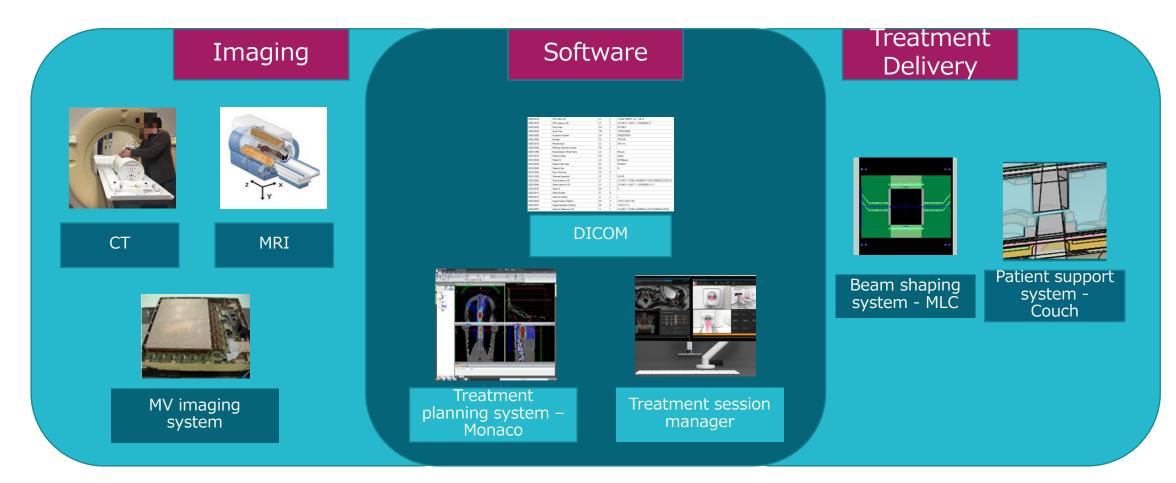





CT to DICOM Image

Slice/Scan coordinates

(0,0)

- CTスライスは ピクセルに分割 される
- (0,0) は左上か ら始まり、配列 の最大値は右下 のピクセル

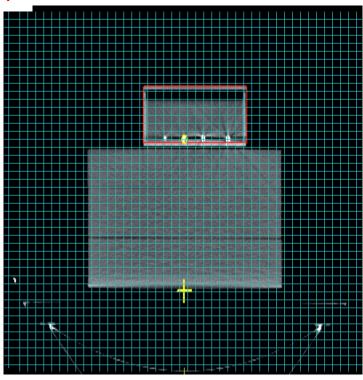

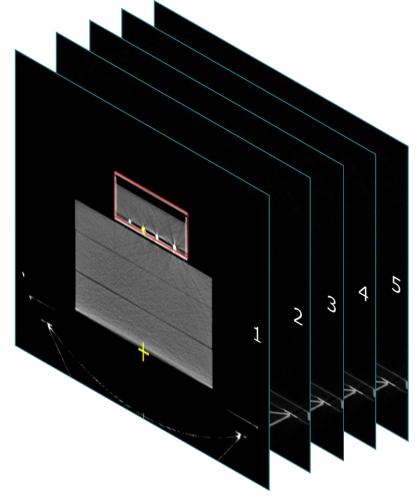

複数スキャンの場合、各スライス には1から始まるインスタンスナ (最大値) ンバーが割り当てられる




CT/MR to DICOM Image

原点の位置

- CTはメーカーに基づいた設定
 - 一般的には
 - ・(0,0,0) スキャンアイソセンタに基づ
 - (0,0,0) カウチの位置に基づく


MRIは原点 (0,0,0) が常に最高のB₀ 均一点に位置する

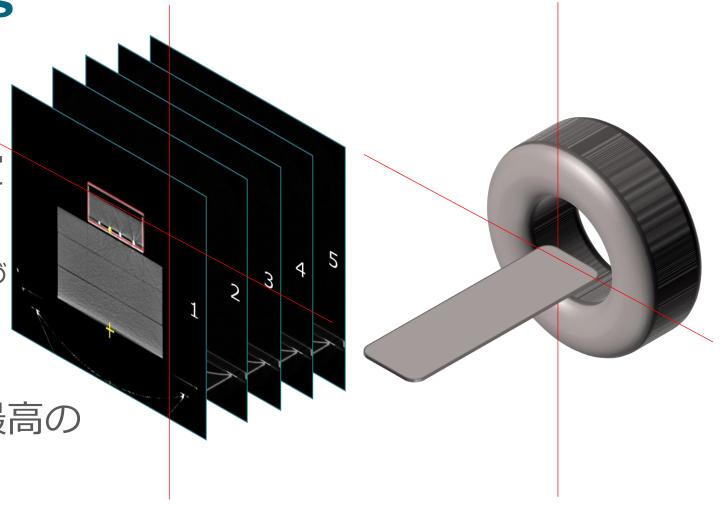




CT/MR to DICOM Image

Slice/Scan coordinates

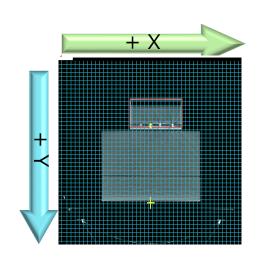

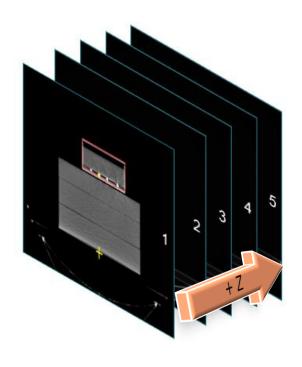

- ・ 座標のXとYはスライス上に定義される
- 座標のZはスライスの厚さに基づいており、スライスの位置を定義される
- head first spineのとき、

Xは右→左に+


Yは腹→背に+

Zは足→頭に+

この空間情報は、画像データを含むDICOMファイルに保存されている




DICOM Image in Monaco

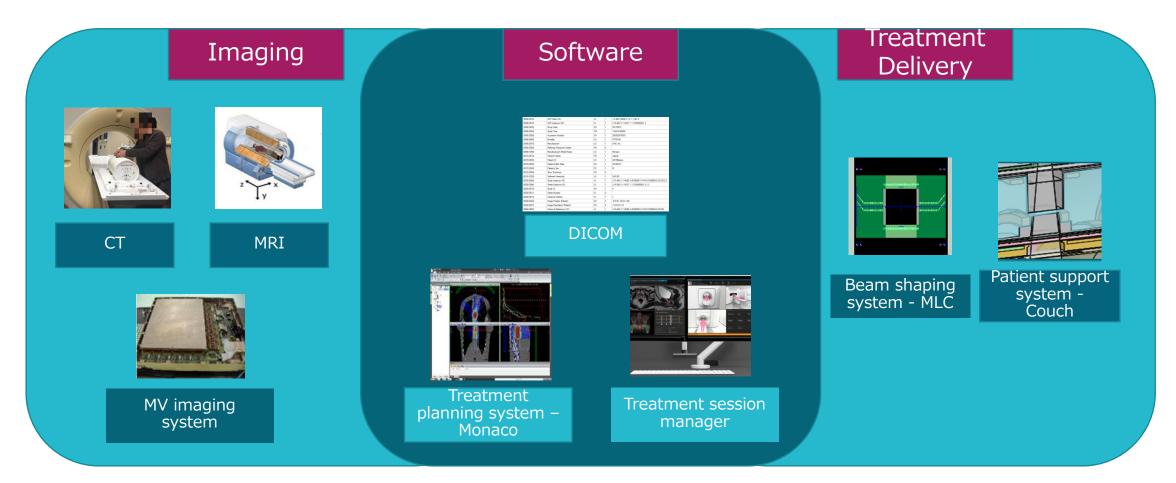



DICOM Image in Monaco

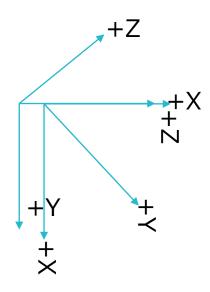


• DICOM画像の座標は前のセクションのとおり

• Monacoは、IEC 61217のCouch座標システムに似ている



DICOM Image in Monaco

Supine position

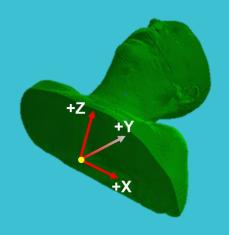


- 患者の向きよって*Monaco*の座標系は変化しないX, Y, Zの向きは仰臥位、腹臥位で同じ
- 座標系の原点は、画像の原点に設定される

-X -> +X : Left -> Right

-Y -> +Y: Out -> In

-Z -> +Z: Down -> Up

Prone position

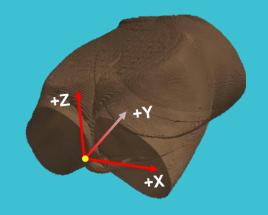

-X -> +X: Left -> Right


-Y -> +Y: Out -> In


-Z -> +Z: Down -> Up



DICOM Image in Monaco


- Monacoでは患者の向きを表すアイ コンが表示される
 - は患者の左手側
 - 緑色は患者の頭側
 - **青色は患者の腹側** (青点は仰臥位では十字線の前にあり、腹臥位では十字線 の後ろにある)

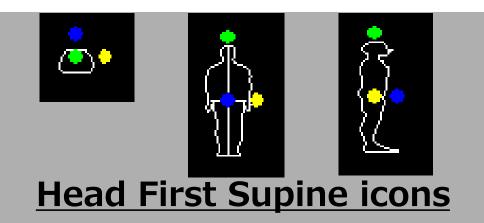

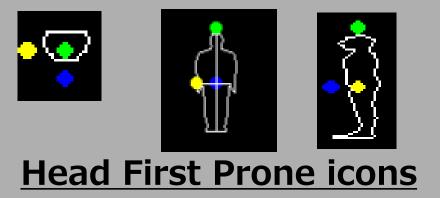



Treatment Couch

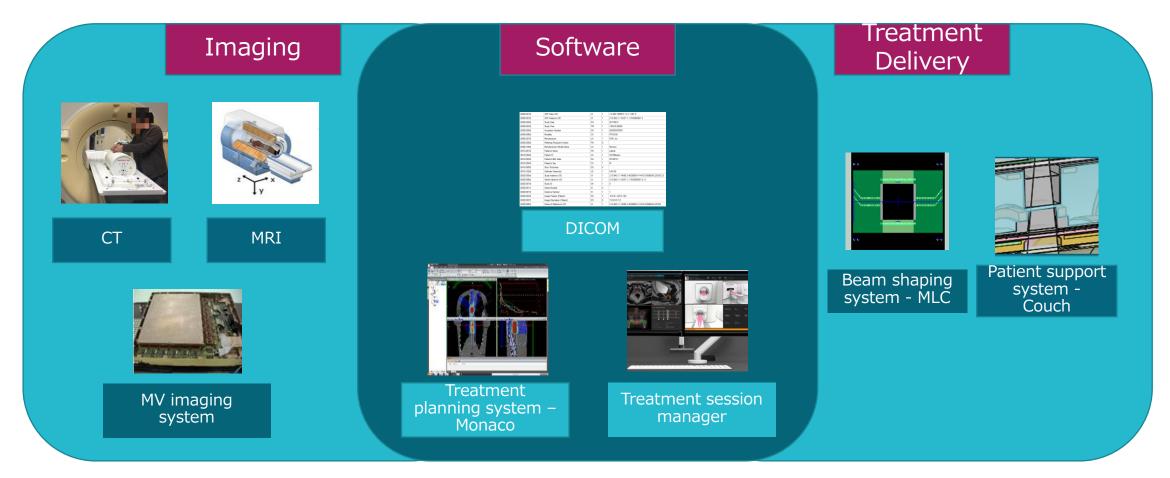




Treatment Couch


カウチ座標は、Radiation Isocenterに対する相対値 になる

- X軸とZ軸は固定
 - Y軸は、治療計画されたIsocenterの位置に基づい て調整される
 - インデックス位置はMonacoのPlanで決定され、Y座標(long)の位置が決まる
 - 例えばインデックス22は、Isocenterに配置 されている場合、2060mmと定義されている

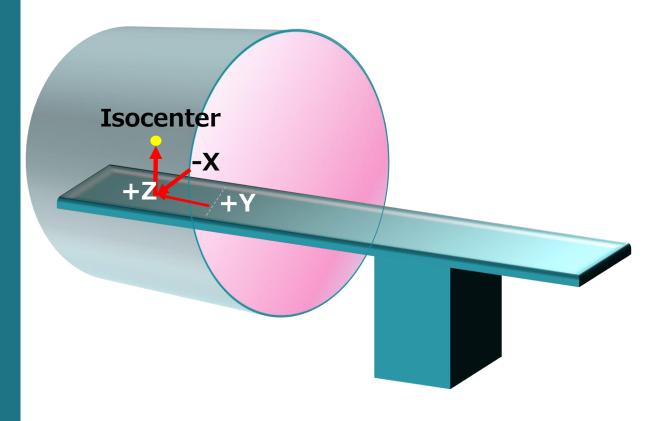




BLD in Monaco

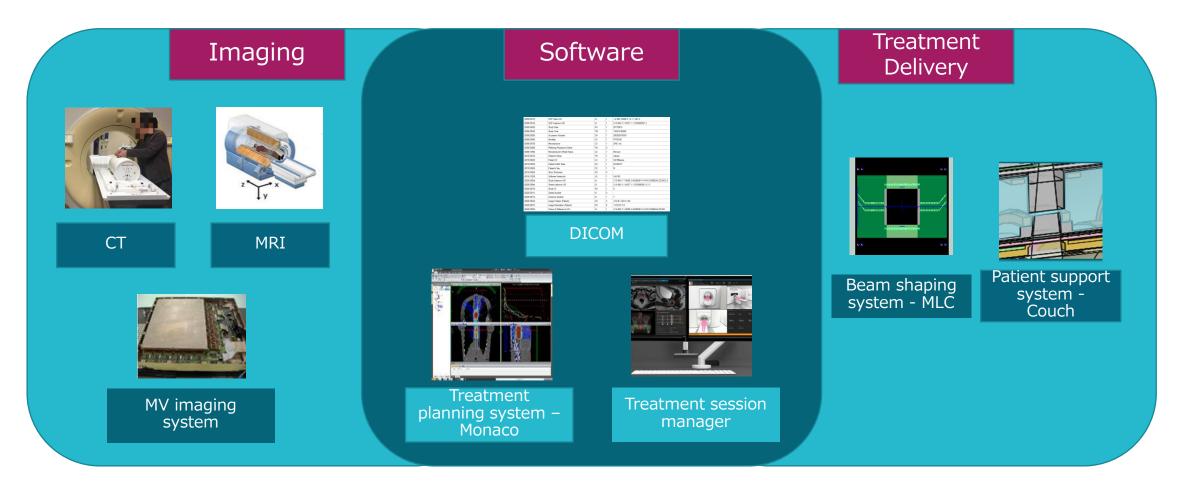



BLD in Monaco

MLC座標は、CTデータ、患者の向き、ガントリーの向きに依存しない

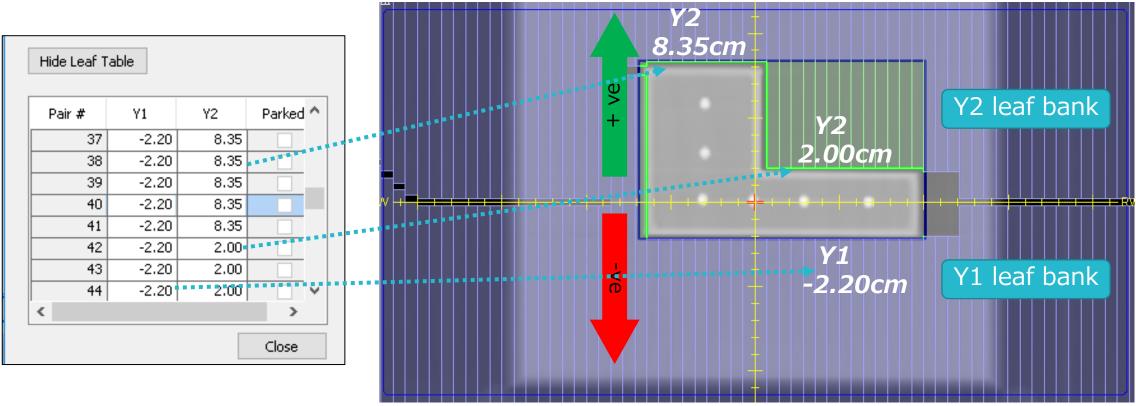




BLD in Monaco


X jawが中心軸を超える と符号がマイナスに変 わる

※Monaco5.5からこの設定にするかIECに準拠するか選択可能

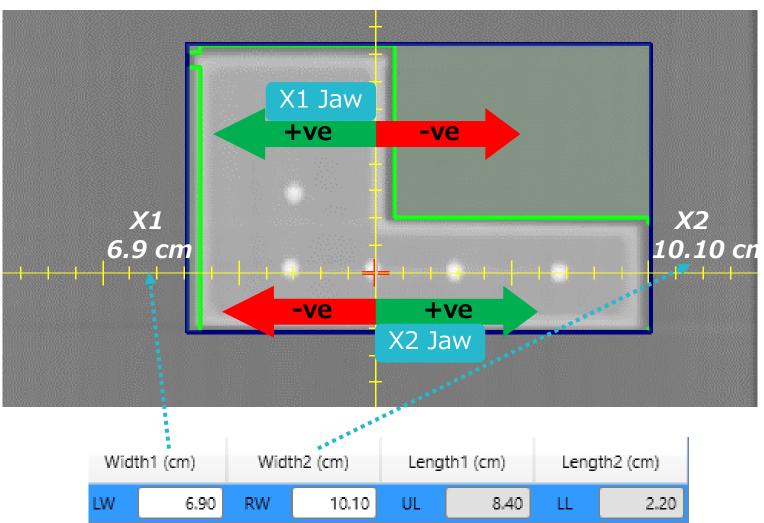



Treatment Session Manager (TSM)

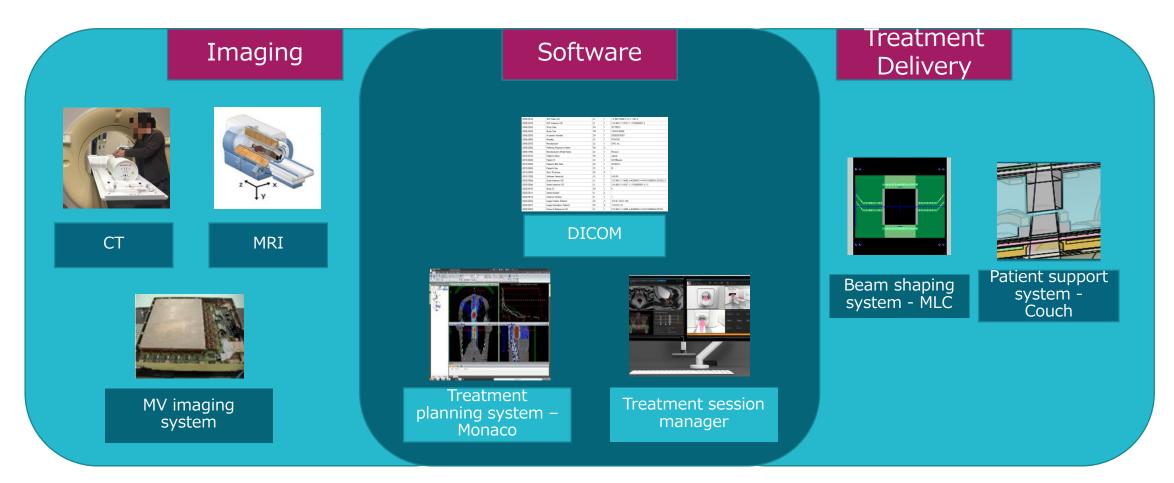




Treatment Session Manager (TSM)

• TSMは、モーションモニタリング用の画像を表示する


Head First Spineの場合

Transverse

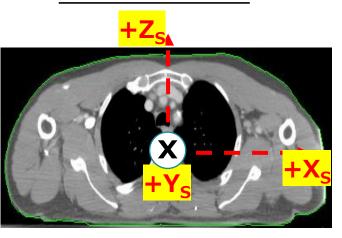


患者に対して足側からみているように 表示される

Coronal

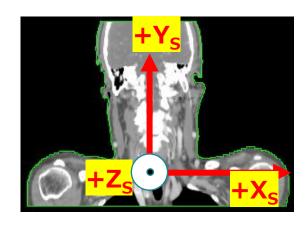

患者に対して腹側からみているよう に表示される

Sagittal

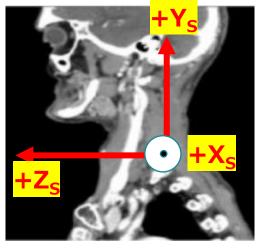

患者に対して左側からみているよう に表示される




Treatment Session Manager (TSM)

患者は右側を向いて おり、患者の左側は 画面向かって奥側と


なる

Monaco

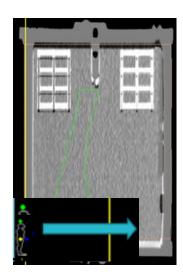

Sagittal slice in Monaco

TSM

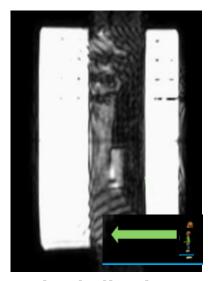


Sagittal slice in TSM


患者は左を向いており、 患者の左側は画面向 かって手前側となる



Treatment Session Manager (TSM)

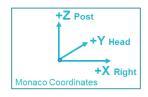

Head First Supine

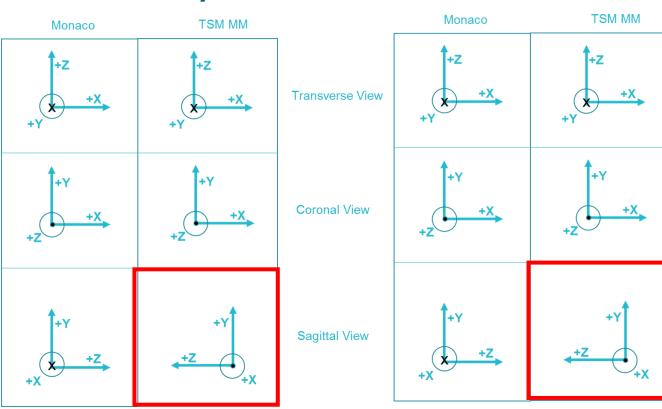


Head First Prone


Head First Position: 違いはsagittal のみ




Treatment Session Manager (TSM)

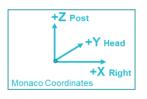

Feet First Supine

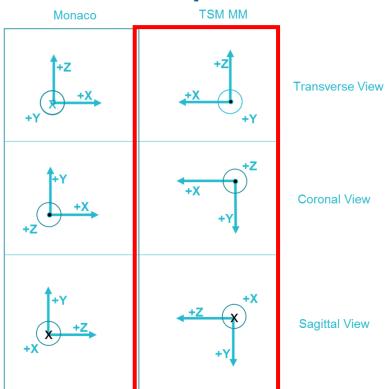

Feet First Prone

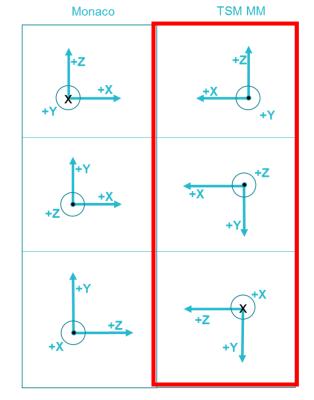

Feet First Position: 全ての断面が異なる



Thank you



Copyright statement

© 2007-2019 Elekta, Inc. All rights reserved. Do not make printed or electronic copies of this guide, or parts of it, without written permission from Elekta, Inc. The information in this guide is for the sole use of Elekta, Inc. personnel, authorized users and licensees of Elekta, Inc. products, and no other purpose.

Use of trademarks and trade names statement

The Elekta trademarks, service marks, logos, and trade names that we use in this document are the registered and unregistered trademarks and trade names of Elekta AB (publ.), its affiliates or a third party that has licensed its trademarks and trade names to Elekta AB (publ.) or its affiliates. Do not make copies, show, or use trademarks or trade names without written permission from Elekta, Inc. an affiliate of Elekta AB (publ.).

Acknowledgement of other trademarks and trade names

Elekta acknowledges the trademarks and trade names of other manufacturers that we use in this document.

Referenced documents

Elekta does not supply all documents that we refer to in this document with the equipment. Elekta reserves the right to make the decision on which of the documents it supplies.

Contact information

Contact Software Support: http://www.elekta.com and click Elekta Care.

Contact Information: http://www.elekta.com/meta/contact.html

Training Calendar: http://www.elekta.com/training

